

Welcome to Dame,

your source for sexual exploration, education, and conversation. We design products for pleasure that help you connect with yourself, enhance sexual wellness, and promote collective wellbeing. Discover your new toy \rightarrow

Meet Dip

Classic Vibrator




Dip has an easy ergonomic shape for shallow penetration and clitoral play. It's a versatile go-to for exploration and discovery, whether it's your first vibe or a new addition to your pleasure trove.



Get to know Dip:

- Medical-grade silicone
- Steady vibration with 5 intensities
- USB-C rechargeable
- Waterproof
- Whisper quiet
- 3-year warranty

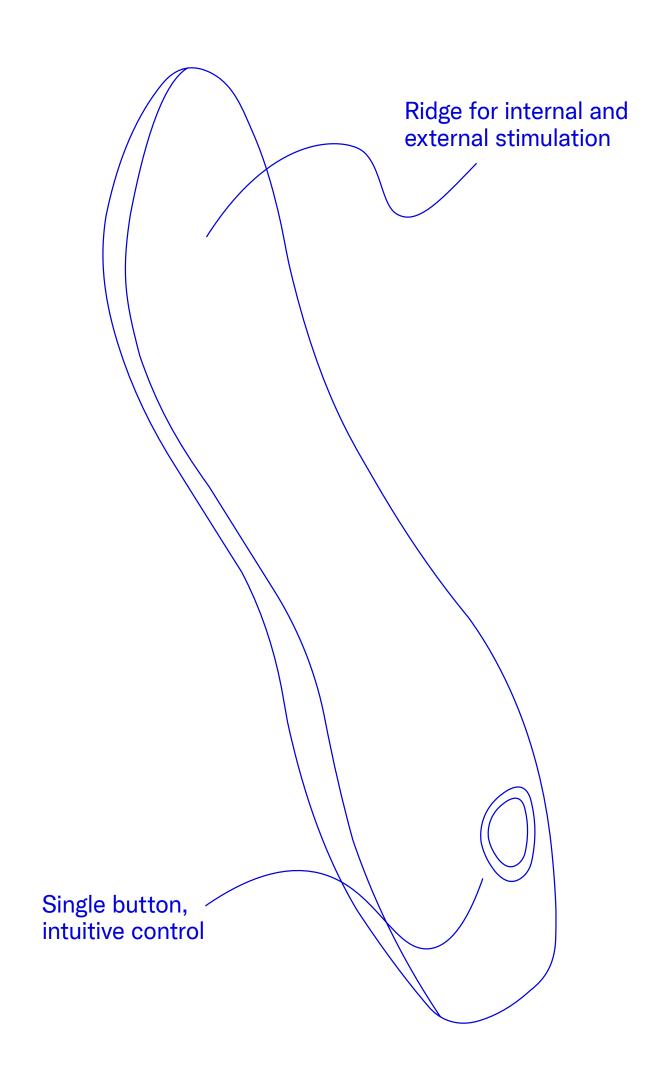

← Using Dip

Please fully charge your Dip before use.

Dip has one button for power and intensity.

Press to turn on.

Press to increase intensity.


Sixth press turns off.

Or **hold for three seconds** at any setting to turn off.

Charging Dip


Battery life: 1 hour

Charge time: 2 hours

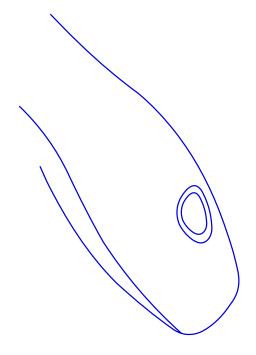

The LED indicator is located on the plastic panel near the charging port. If the battery is low, the LED will blink yellow when the button is pressed. While charging, the LED will blink green. Once fully charged, the LED will be solid green.

Charging
Fully Charged

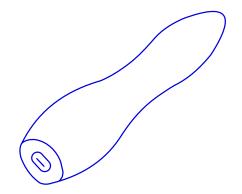

Travel Mode


In Travel Mode, Dip cannot be turned on accidentally. Hold the power button for 10 seconds to activate Travel Mode—the LED will blink for those ten seconds and flash red at the end. To exit Travel Mode, just plug Dip in to charge.

Caring for Dip

Dip is waterproof. Clean Dip after every use using either soap and water or a water-based sex toy cleaner, like Dame's Hand + Vibe Cleaner. Do not use 100% alcohol-based solutions. Dry thoroughly. Store Dip separately from other toys, and away from extreme heat or cold.

Caution

Do not use silicone-based lube with Dip. Do not clean Dip with untested products containing alcohol, petroleum, or acetone. Dame's Hand + Vibe cleaner is acceptable. Do not boil, bake, or clean Dip in the dishwasher. Do not insert anally; Dip's base is not flared for anal use. Do not use Dip if it is malfunctioning. This includes, but is not limited to, overheating, sparking, or if there is material damage.

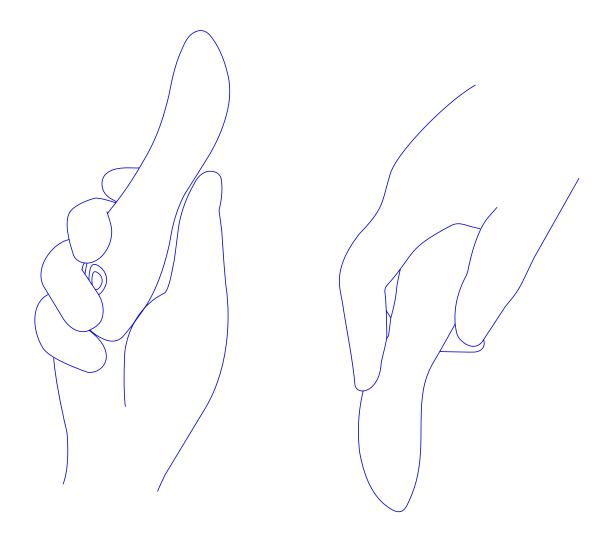

Explore your vulva with Dip's ridge, and use the bulbous side for broad stimulation. Try slipping Dip into your vagina for a stronger internal sensation.

Questions?

Email: support@dameproducts.com

©2024 Dame Products Inc. dba Dame Products.

Dame Products and Dip are trademarks or registered trademarks of Dame Products Inc. All rights reserved





Snap this code to explore online product manual, tips, and all things sexual health.

This product can be disposed of in e-waste programs that accept products with lithium polymer batteries. For hygiene concerns, carefully cut away the silicone using an X-Acto knife or similar. Do not puncture the plastic enclosure. Dispose of the silicone.