

Get
in touch
with yourself.

Welcome to **Dame,**

your source for sexual exploration, education, and conversation. We design products for pleasure that help you connect with yourself, enhance sexual wellness, and promote collective wellbeing. Discover your new toy →

Meet Eva

Hands-Free Vibrator




Eva is a hands-free clitoral vibrator that delivers consistent stimulation during penetration. With flexible wings that tuck snugly under your labia, Eva stays in place and out of the way so you can focus on your pleasure.



Get to know Eva:

- 3 Intensities
- Flexible Fit
- Medical-Grade Silicone (Phthalate-Free)
- Partners-Optional
- Waterproof
- 3-Year Warranty

Intuitive Controls

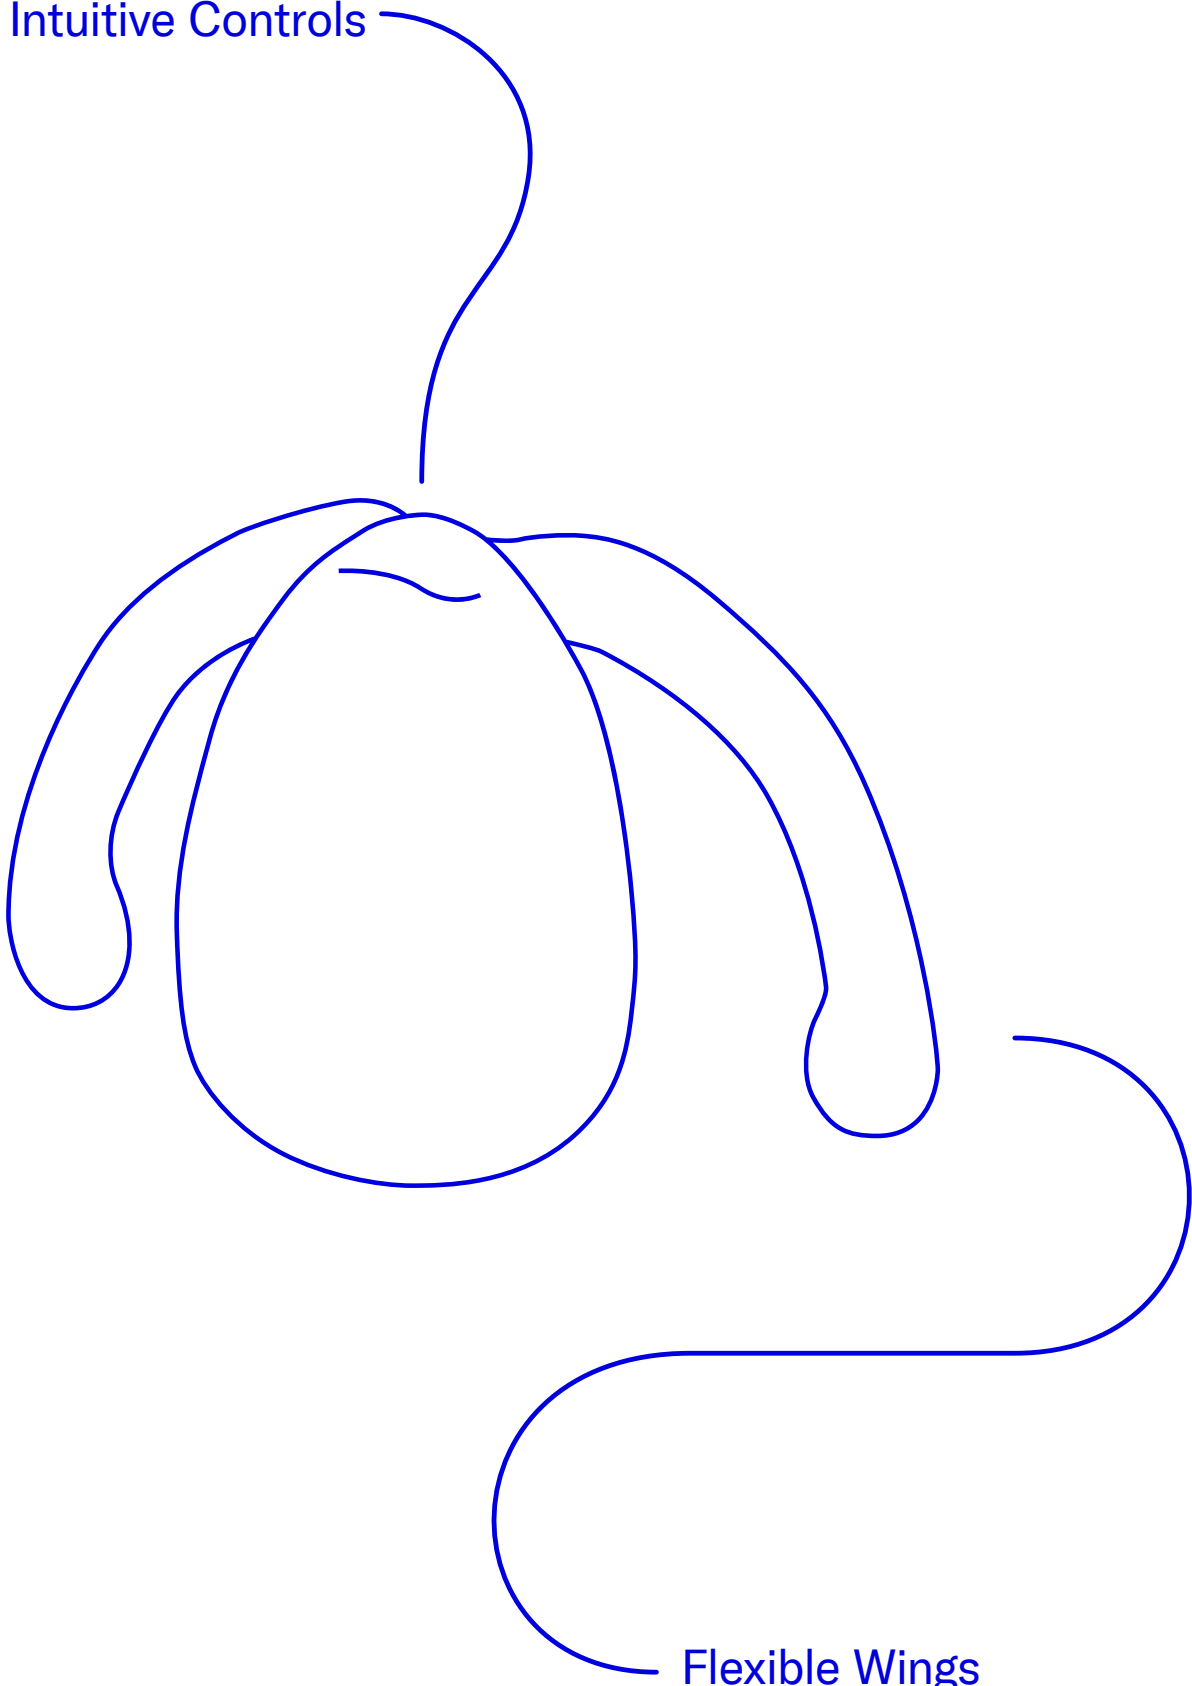


Flexible Wings

How to Place Eva

Place Eva where it feels best


Pull each labium (lip!) over one wing at a time.

Adjust as necessary.

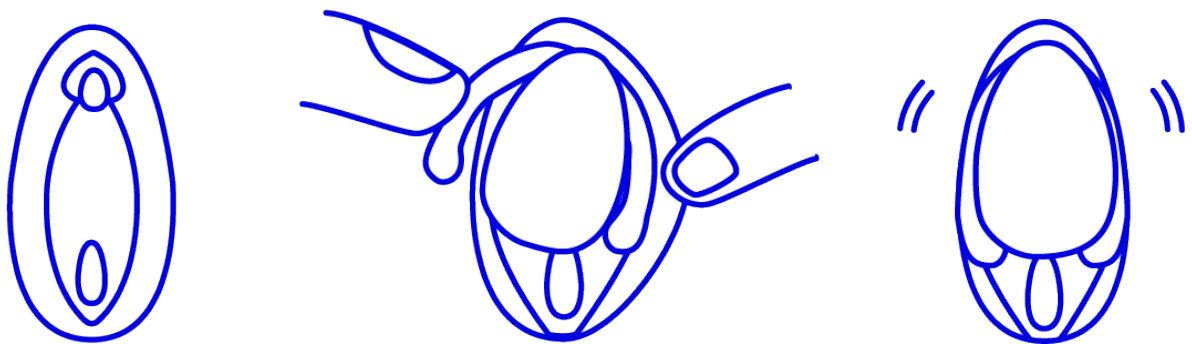

Don't worry—it may take a few minutes and a couple of tries to get comfortable.

You can even try these options:

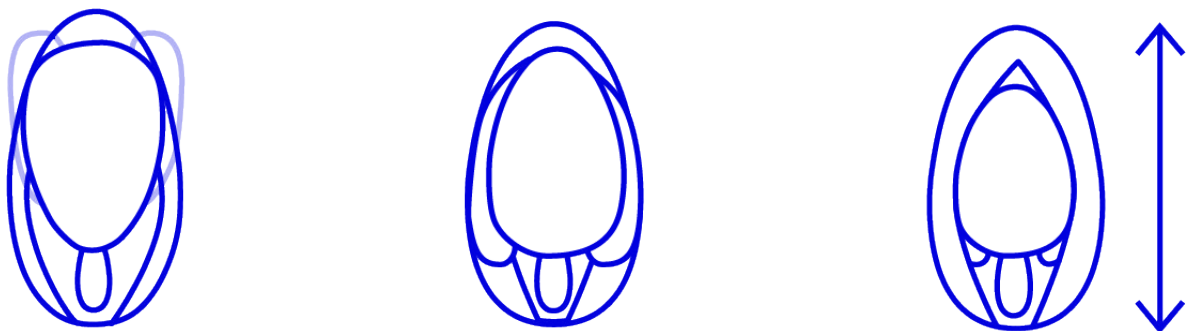

Upside Down

Inner or Outer Labia

Higher or Lower

No dice? No worries!

Try shifting positions (e.g., lying back vs. sitting up, spreading your legs more) or ask your partner for a hand.

← Using Eva

Please fully charge your Eva before use. Before pulling in your partner to play, try using Eva solo to see how it fits and works best for you. Keep in mind that Eva fits differently for different people!

Eva has one button to control power and intensities.

Hold to turn on and off.

Press to cycle intensities.




First Press



Second Press



Third Press

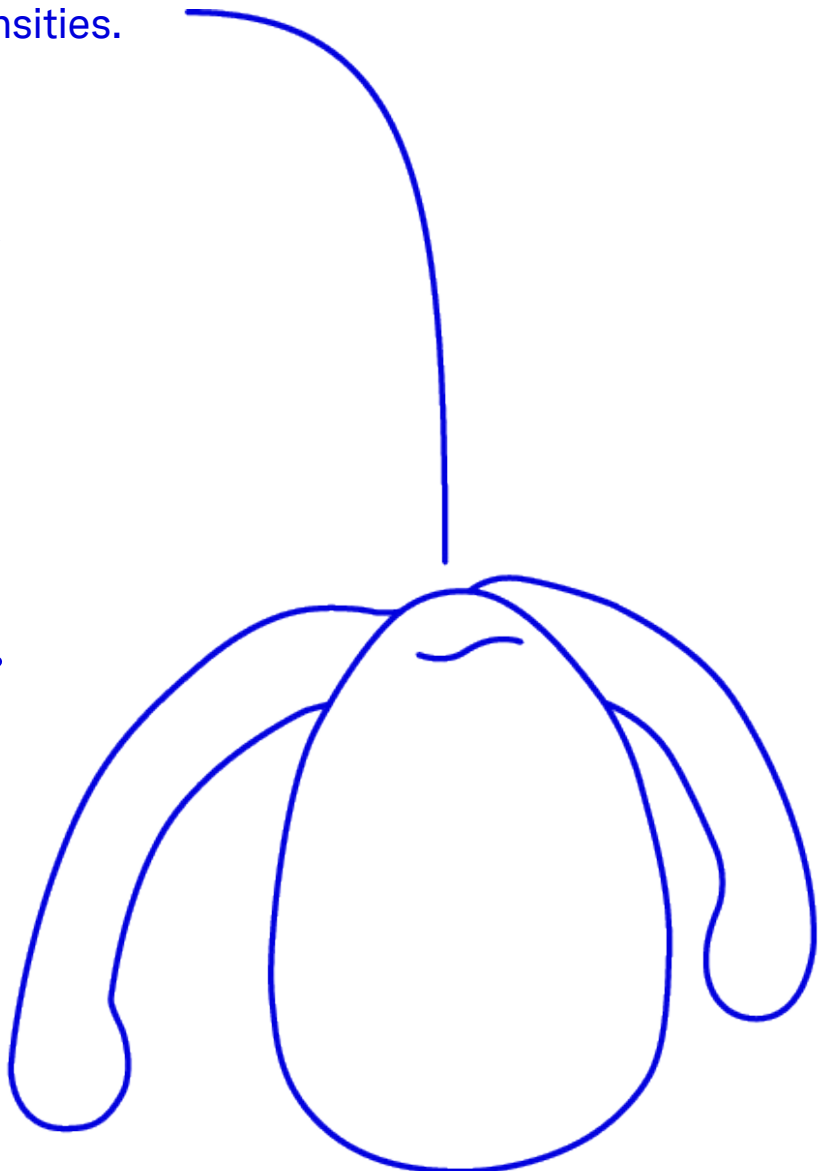


← Charging Eva

Battery life (high intensity/steady mode): 1 hour


Charge time: 4 hours

The LED indicator is located on Eva's front-facing side, near the button on top. Eva will blink green while plugged in and will stay green when fully charged. On low battery, Eva will blink red. Eva's LED was designed to remain discreet while charging, so it may be a bit dim in a fully illuminated room. We suggest turning the lights off or cupping your hand over it to verify that it's charging correctly.

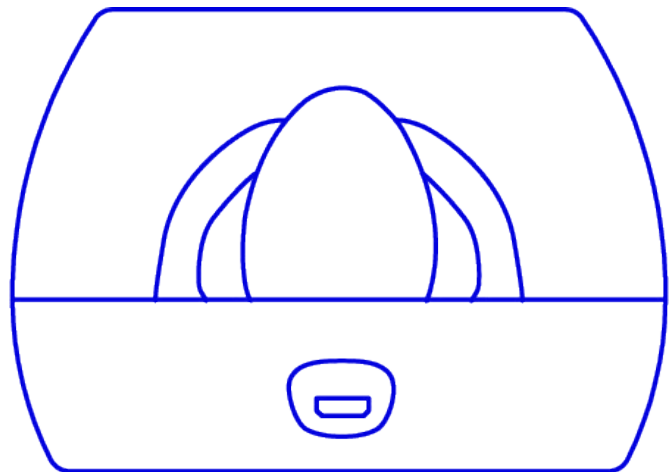

Charging

Fully Charged

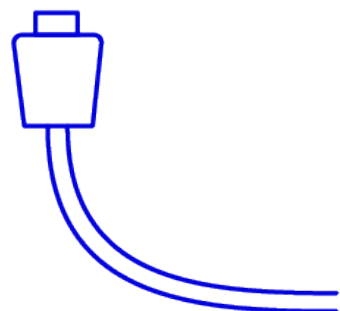

Travel Mode

In Travel Mode, Eva cannot be turned on accidentally. Hold the power button for 10 seconds to activate Travel Mode—the LED will blink for those ten seconds and flash red at the end. To exit Travel Mode, place Eva in its charging base.

Caring for Dip

Eva is waterproof. Always clean Eva after every use, using either soap and water or a water-based sex toy cleaner like Dame's Hand + Vibe Cleaner. Do not use 100% alcohol-based solutions. Dry thoroughly. Store Eva separately from other toys, and away from extreme heat or cold.

Caution

Do not overextend or twist Eva's wings. Do not use silicone-based lube with Eva. Do not clean Eva with products containing petroleum or acetone. Do not boil, bake, microwave, or run Eva through the dishwasher. Do not submerge the charging base in water; it's only water-resistant.

Tips and Tricks

- Eva plays well with others: toys, strap-ons, penises, etc.
 - A single finger can help hold Eva in place while switching positions.
 - Lube can make things more intense, but it also might make Eva's wings slippery.
 - For more pressure or security, try wearing panties over Eva (crotchless or otherwise) or wearing Eva under a harness.
-

Questions?

Email: support@dameproducts.com

©2024 Dame Products Inc. dba Dame Products.

Dame Products and Eva are trademarks or registered trademarks of Dame Products Inc. All rights reserved



[Snap this code](#)
to explore online
product manual,
tips, and all things
sexual health.