

Meet

your new

toy.

Welcome to **Dame,**

your source for sexual exploration, education, and conversation. We design products for pleasure that help you connect with yourself, enhance sexual wellness, and promote collective wellbeing. Discover your new toy →

Meet Fin

Finger Vibrator



An intuitive finger vibrate designed to add excitement to your touch. Personal, intimate, and made for all types of play.

Get to know Fin:

- 5 levels of vibration
- USB-C rechargeable
- Waterproof
- 3-year warranty
- Made of medical-grade silicone



Removable
Tether

USB-C Rechargeable



Pointed Precision Tip

← Using Fin

Please fully charge your Fin before use. Fin has one button for power and intensity.

Press and hold to turn on.

Press to increase intensity.

At the fifth intensity level,
press to decrease intensity.

Press and hold at any setting to turn off.

Charging Fin

Battery life (high intensity/steady mode): 1 hour

Charge time: 2 hours

The LED indicator is located at Fin's pointed tip. To charge, plug the USB-C cable into the top of Fin, located on the small knob positioned between your fingers during use. The LED will pulse while charging and glow solid once fully charged.

Charging

Fully Charged

Low-battery mode: when Fin is at 25% charge, the toy will vibrate and the LED light will flash 5 times when switching the toy off.



Travel Mode

Travel worry-free with Fin. Activate travel lock by holding the power button for 12 seconds. The LED light will flash 12 times then switch off to confirm the toy is locked. To deactivate, just plug Fin in to charge.

Caring for Fin

Fin is waterproof. Clean your vibe after every use using either soap and water or a sex toy cleaner, like Dame's Hand + Vibe Cleaner. If using an alcohol-based cleaner, wait a few seconds for the alcohol to evaporate before using the toy. Dry thoroughly. Store separately from other toys, and away from extreme heat or cold.

Caution


Do not use silicone-based lube with Fin.

Do not clean Fin with untested products containing alcohol, petroleum, or acetone. Dame's Hand + Vibe cleaner is acceptable.

Do not boil, bake, or clean Fin in the dishwasher.

Do not insert anally; Fin's base is not flared for anal use.

Do not use Fin if it is malfunctioning. This includes, but is not limited to, overheating, sparking, or if there is material damage.

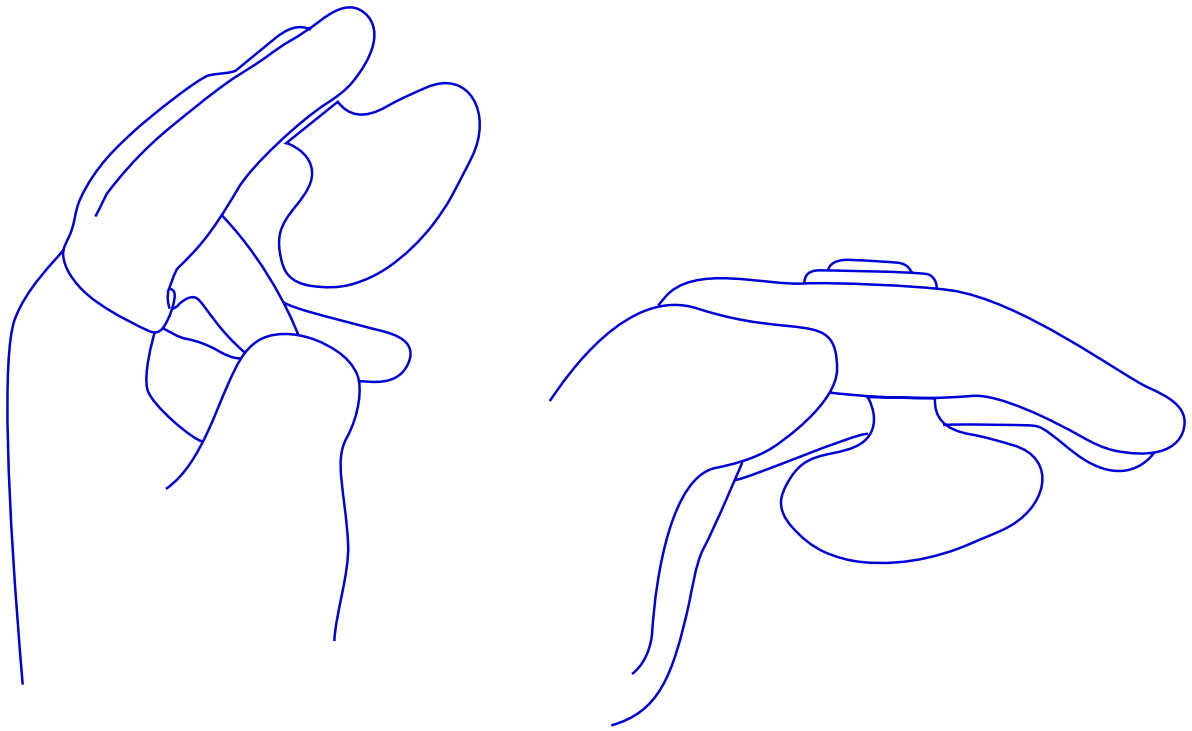

There's no right or wrong way to use Fin—it works the way you work. Tether on. Tether off. Pointed side. Softer side. At your fingertips or near the palm. You can change how you wear Fin to get the sensations and mobility you want. Switch from pinpoint stimulation to broad stimulation by changing which end is closer to your fingertips.

Questions?

Email: support@dameproducts.com

©2024 Dame Products Inc. dba Dame Products.

Dame Products and Fin are trademarks or registered trademarks of Dame Products Inc. All rights reserved



[Snap this code](#)
to explore tips,
and all things
sexual health.

This product can be disposed of in e-waste programs that accept products with lithium polymer batteries. For hygiene concerns, carefully cut away the silicone using an X-Acto knife or similar. Do not puncture the plastic enclosure. Dispose of the silicone.